

DF300 SUZUKI PRECISION CONTROL ACCESSORIES

Suzuki's flagship DF300 4-stroke leads in power, performance and technology. Following are some high-tech items to help take advantage of Suzuki's leading edge technology.

Suzuki Precision Control (SPC) Electronic Throttle and Shift Systems for DF300

Suzuki Precision Control (SPC) offers DF300 boaters the latest in technologically advanced control systems. Suzuki Precision Control is a computer-based electronic "Fly-by-Wire" system eliminating mechanical control cables. While you enjoy smooth, friction-free throttle operation, the system's computer is processing and transmitting commands in real-time to actuators at the engine delivering precise throttle control with smoother, decisive shifting.

Single Station SPC Kit, Single Engine

67000-98J00 Single Station SPC Kit – Includes:

09407-08401	Buzzer Clamp (1)
33925-93J00	ECU Cushion (1)
33926-98J00	Resistor Terminal (2)
36623-98J00	BCM No.1 Harness Assembly for Single Engine Single Station
36625-98J00	Battery Wire
36770-98J00	BCM Unit
36775-98J00	BCM Holder-L
36776-98J00	BCM Holder-R
37100-98J00	Main Switch Panel Assembly
37100-98J10	Single Panel Assembly
38500-93J90	Warning Buzzer
67200-98J00	Single Engine Remote Control Assy
33911-88BLO	BCM Connector Cap
09403-13402	Harness Clamp (10)

2nd Station SPC Kit, Single Engine

67000-98J10 2nd Station SPC Kit – Includes:

09407-08401	Buzzer Clamp
33925-93J00	ECU Cushion
36622-98J00	Dual Station Main Harness Assembly
36624-98J00	BCM No.2 Harness Assembly for Single Engine Second Station
36770-98J00	BCM Unit
36775-98J00	BCM Holder-L
36776-98J00	BCM Holder-R
37100-98J10	Single Panel Assembly
37803-93J00	Emergency Stop Panel Assembly
38500-93J90	Warning Buzzer
67200-98J00	Single Engine Remote Control Assy
33911-88BLO	BCM Connector Cap
09403-13402	Harness Clamp (10)

Dual and Triple Engine
Remote Control Assembly





Single Engine
Remote Control Assembly



Flush Mount
Remote Control Assembly

Single Station SPC Kit, Triple Engines

67000-98J40	Single Station SPC Kit – Includes:
09407-08401	Buzzer Clamp
33925-93J00	ECU Cushion
33926-98J00	Resistor Terminal (2)
36621-98J10	Triple Engine Harness Assembly
36623-98J10	BCM No.1 Harness Assembly for Triple Engine Single Station
36625-98J00	Battery Wire
36770-98J00	BCM Unit
36775-98J00	BCM Holder-L
36776-98J00	BCM Holder-R
37100-98J00	Main Switch Panel Assembly
37100-98J30	Triple Panel Assembly
38500-93J90	Warning Buzzer
67200-98J10	Dual Engine Remote Control Assembly
09403-13402	Harness Clamp (18)

2nd Station SPC Kit, Triple Engines

67000-98J50	2nd Station SPC Kit – Includes:
09407-08401	Buzzer clamp
33925-93J00	ECU cushion
36622-98J00	Dual Station Main Harness Assy
36624-98J10	BCM No.2 Harness Assembly for Triple Engine Second Station
36770-98J00	BCM Unit
36775-98J00	BCM Holder-L
36776-98J00	BCM Holder-R
37100-98J30	Triple Panel Assembly
37803-93J00	Emergency Stop Panel Assembly
38500-93J90	Warning Buzzer
67200-98J10	Dual Engine Remote Control Assembly
09403-13402	Harness Clamp (10)

Single Station SPC Kit, Dual Engines

67000-98J20	Single Station SPC Kit – Includes:
09407-08401	Buzzer Clamp
33925-93J00	ECU Cushion
33926-98J00	Resistor Terminal(2)
36621-98J00	Dual Station Harness Assembly
36623-98J10	BCM No.1 Harness Assembly for Dual Engine Single Station
36625-98J00	Battery Wire
36770-98J00	BCM Unit
36775-98J00	BCM Holder-L
36776-98J00	BCM Holder-R
37100-98J00	Main Switch Panel Assembly
37100-98J20	Dual Panel Assembly
38500-93J90	Warning Buzzer
67200-98J10	Dual Engine Remote Control Assembly
09403-13402	Harness Clamp (15)

2nd Station SPC Kit, Dual Engines

67000-98J30	2nd Station SPC Kit – Includes:
09407-08401	Buzzer Clamp
33925-93J00	ECU Cushion
36622-98J00	Dual Station Main Harness Assembly
36624-98J10	BCM No.2 Harness Assembly for Dual Engine Second Station
36770-98J00	BCM Unit
36775-98J00	BCM Holder-L
36776-98J00	BCM Holder-R
37100-98J20	Dual Panel Assembly
37803-93J00	Emergency Stop Panel Assembly
38500-93J90	Warning Buzzer
67200-98J10	Dual Engine Remote Control Assembly
09403-13402	Harness Clamp (10)

Flush Mount SPC Kit

67000-98J60	Flush Mount SPC Kit – Includes:
09407-08401	Buzzer Clamp (1)
33925-93J00	ECU Cushion (1)
33926-98J00	Resistor Terminal (2)
36623-98J00	BCM No.1 Harness Assembly for Single Engine Single Station
36625-98J00	Battery Wire
36770-98J00	BCM Unit
36775-98J00	BCM Holder-L
36776-98J00	BCM Holder-R
37100-98J00	Main Switch Panel Assembly
37100-98J10	Single Panel Assembly
38500-93J90	Warning Buzzer
67200-98J20	Flush Mount Remote Control Assembly

SPC Box Only (replacement units)

67200-98J00	Single Engine SPC Box only
67200-98J10	Dual and Triple Engine SPC Box only
67200-98J20	Flush Mount SPC Box only



DF300 Control Panel Assemblies

Control Panel Assemblies

Single to multiple engine, single or second station, select the panel needed for your application.

*Requires Main Switch Assembly 37100-98J00.

37100-98J10	Single Engine Control Panel Assy
37100-98J20	Dual Engine Control Panel Assy
37100-98J30	Triple Engine Control Panel Assy

Main Power Key Switch Assembly

Main Power Key Switch required for use with switch control panels listed below. Includes key.

37100-98J00*	Main Power Key Switch Assembly
--------------	--------------------------------

Emergency Stop Switch Panel Assembly

Includes: E-Stop Switch with Panel and Lanyard.

37803-93J00	Emergency Stop Switch Panel Assy
-------------	----------------------------------

Wiring Harnesses

Main Wiring Harness. Order length as needed for rigging applications.

36620-98J00	21' (6.5m) Wiring Harness
36620-98J10	31' (9.5m) Wiring Harness
36620-98J20	6.5' (2m) Wiring Harness Extension (Optional; order as needed)

Replacement Wiring Harness

36621-98J00	Dual Engine Single Station Harness
36621-98J10	Triple Engine Single Station Harness
36622-98J00	Dual Station Main Harness
36770-98J00	Boat Control Module (BCM)
36623-98J00	BCM Harness No1 For Single Engine Single Station
36623-98J10	BCM Harness No1 For Multiple Engines Single Station
36624-98J00	BCM Harness No 2 for Single Engine Second Station
36624-98J10	BCM Harness No 2 for Multiple Engine Second Station

Battery Isolator Lead Set

33830-98J01	Used for charging auxillary battery DF300
-------------	---



Single Engine Control Panel Assembly



Dual Engine Control Panel Assembly



Triple Engine Control Panel Assembly



Main Power Key Switch Assembly



Emergency Stop Switch Panel Assembly